# INSTALLATION INSTRUCTIONS STELLR® PENDANT

RECESSED MOUNT DOWNLIGHT AND WAVEGUIDE FIXTURE

### **INSTALLATION NOTES**

Read all instructions before beginning installation.

Disconnect power before beginning installation.


Wear clean non-abrasive gloves when handling fixture.

Do not remove protective cover or film until Step 10.


The light sources contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.


PART ID	ITEM	QTY.	NOTES
A	Housing	1	
B	Access Panel	1	
G	Hangar Bars	2	Divided into halves. Secured with locking screws (2) on each side.
D	Retaining Clamps	2	
<b>3</b>	Retaining Screws	2	
<b>(1)</b>	Mounting Adaptor	1	
G	Cable	1	
<b>(1)</b>	Canopy Plate	1	
0	Fixture	1	
0	Zero-Sightline Appliqué	1	Only provided with Zero-Sightline applications.
K	Zero-Sightline Appliqué Mud Plug	1	Only provided with Zero-Sightline applications.
•	Adjustable Bracket Assy	2	Included with DHA-TG-KIT. Provides housing height adjustment.
NOT SHOWN IN DIAGRAM			
	Protective Cover	1	Ships attached to fixture body
	Protective Film	1	Ships attached to waveguide


## KIT OF PARTS

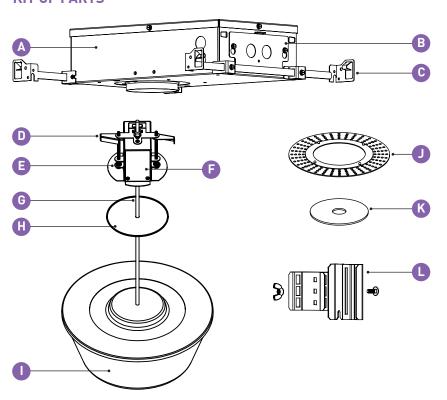

#### INSTALLATION INSTRUCTIONS

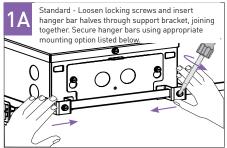


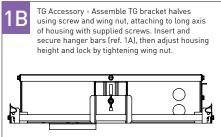

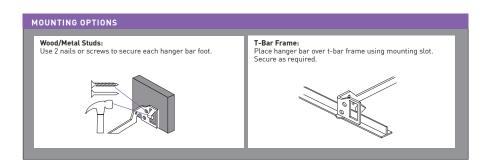

Here

Adjust housing laterally, securing with locking screws. Align square housing apertures and tighten locking screw.



Raise driver(s) through housing aperture and secure using supplied Velcro.

Loosen splicing access panel screws and remove panel. Make electrical connections according to the diagrams shown on page 4. Install access panel and tighten screws.


Access Panel


Requires customer supplied 9" feed wires

Cut clean hole in ceiling, tight to housing collar aperture. For JA8 Title 24 Installations apply caulk between housing collar and ceiling substrate to create airtight seal.

Flange Overlay - 3.8125" required ceiling cutout Zero-sightline - 5.00" required ceiling cutout

Install zero-sightline appliqué and mud plug if applicable using the factory supplied drywall screws, otherwise proceed to step 6.

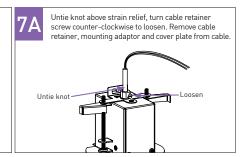

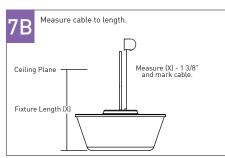


Install cover plate, mounting adaptor and cable retainer on cable. Tighten retainer screw and tie knot in cable. Cut and strip cable above the knot leaving 6" of wire to make wiring connections.

Tie knot here

Tighten just below mark made in 7B

Make wiring connections from driver(s) to pendant cable referring to the wiring diagrams on page 4 using factory supplied connectors.

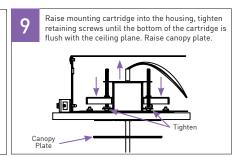







#### **GENERAL NOTES**


#### **REMOTE POWER SUPPLY**

Remove retaining screws and cover plate to access driver.



Mount power supply to substrate using customer supplied screws, 6' spacing required between power supplies. Refer to wiring diagrams on Page 4 and make electrical connections. Reinstall cover.



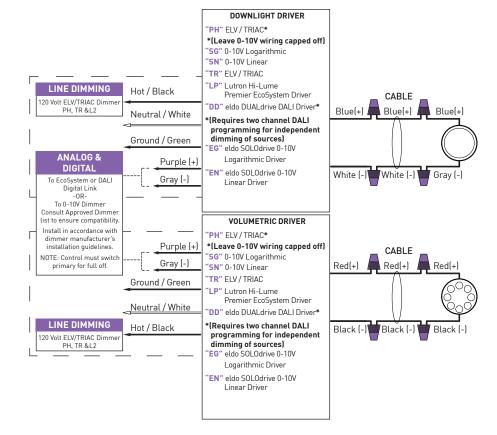

FOR FULL WARRANTY INFORMATION AND COMPREHENSIVE INSTALLATION GUIDE, PLEASE VISIT WWW.LUCIFERLIGHTING.COM.

[DATE OF REV: 09202024]
[LIT-DOM-STELLR-RECESSED-AUG20]



luciferlighting.com

[PH] +1-210-227-7329 [FAX] +1-210-227-4967 ©2024 Lucifer® Lighting Company As part of its policy of continuous research and product development, the company reserves the right to change or withdraw specifications without prior notice.

